


**RELAY LOCATIONS:**

**740 (ALL)**

**760 (1983-87)**

**940 (ALL EXCEPT SE MODEL)**

- A - Bulb failure sensor
- B - Seat belt reminder
- C - Windshield wiper delay
- D - Tailgate wiper delay
- E - Fuel injection system relay
- F - Impulse relay (1982) or front foglights
- G - Flasher unit
- H - Main lighting relay (1983)
- I - Overdrive relay
- J - Window winders/electric fan
- K - Central locking (unlocking)/maint lighting relay (1984-on)
- L - Empty
- M - Auxiliary light
- N - Rear foglights
- O - Empty
- P - Empty
- R - Empty/ignition advance
- S - Oil level sensor

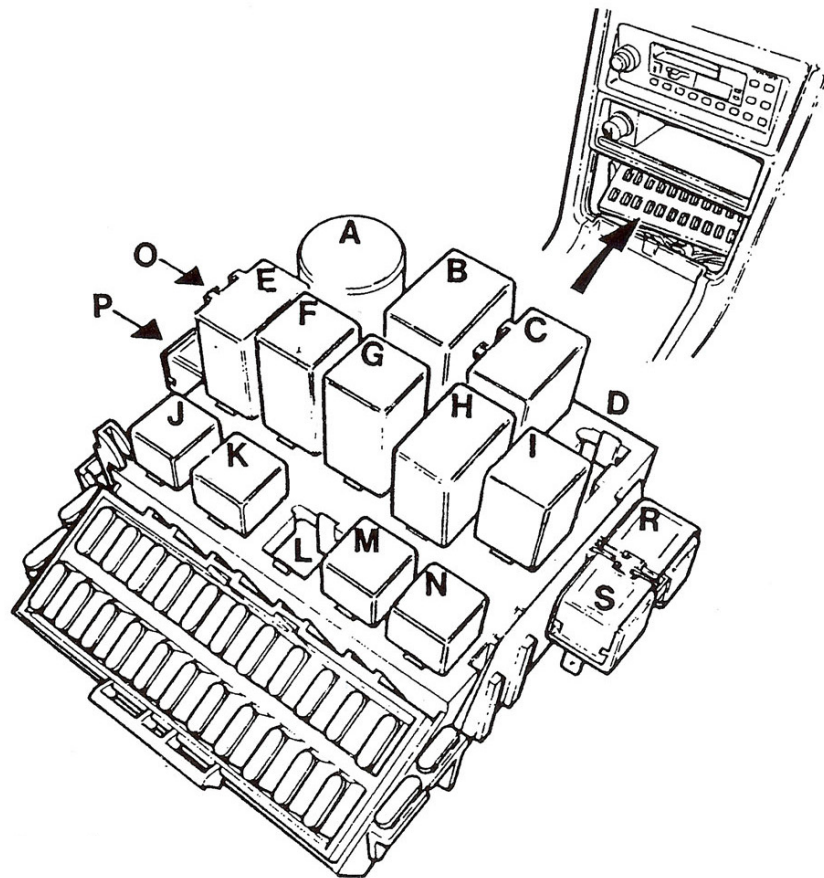

**RELAY LOCATIONS:**

**760 (1988 and later)**

**940 SE MODEL (ALL)**

**960 (ALL)**

- A - Light relay
- B - Fuel injection
- C - Central locking system
- D - Front fog lamp
- E - Light relay
- F - Failure sensor
- G - Overdrive
- J - Window lift and roof hatch
- K - Intermittent relay for rear window wiper
- L - Intermittent relay for windshield wiper
- M - Seat belt reminder

