


Relay Locations, 1984 240 dash

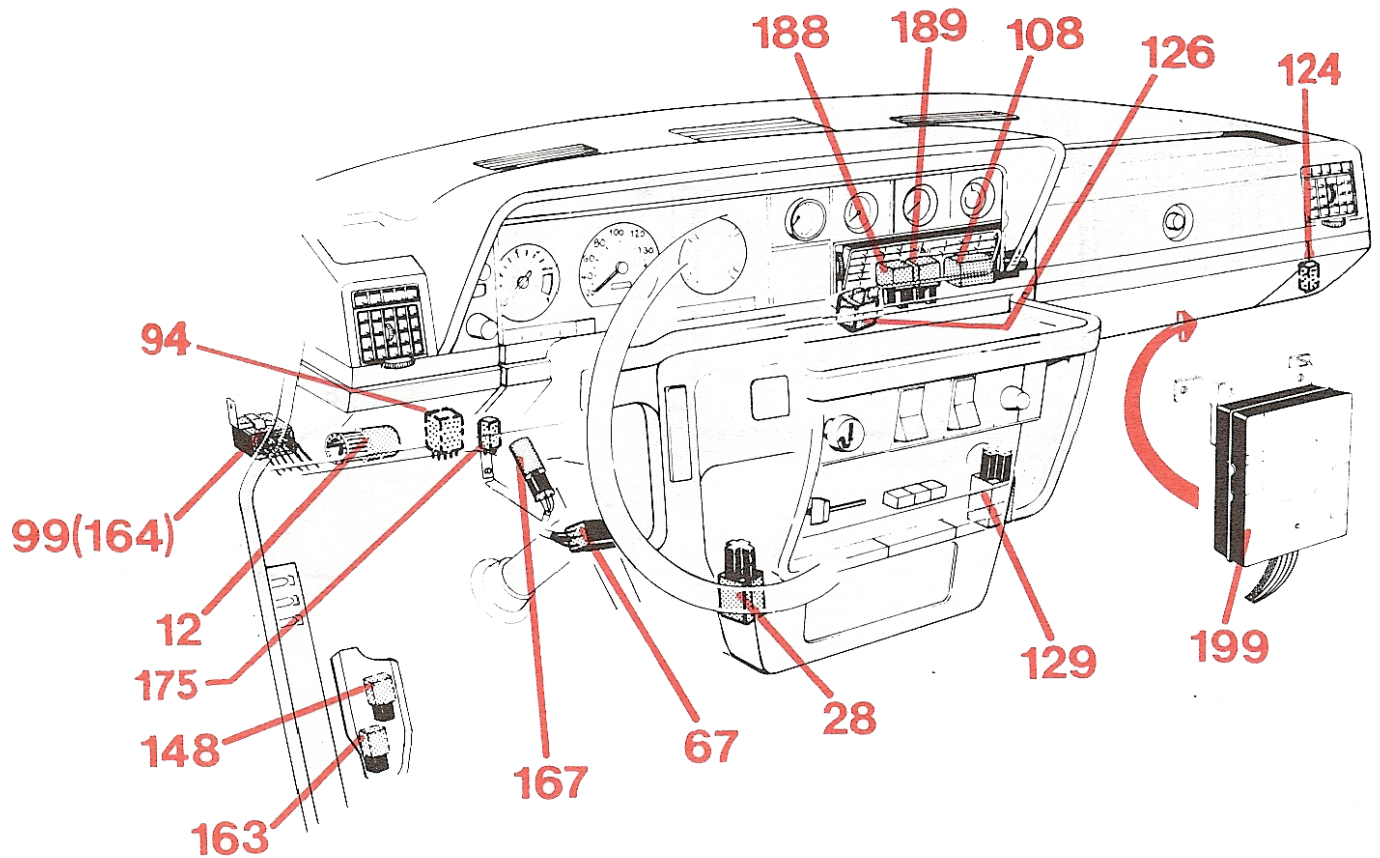

- 12 Bulb failure warning relay
- 28 Turn signal flash relay
- 67 Warning chime/buzzer
- 94 Fasten seat belt light
- 99 Fuel pump relay (Turbo only)
- (164) Preheat control unit (diesel only)
- 108 Transmission overdrive relay
- 124 Temp sensor (Japan)
- 126 Electric window relay
- 129 Air conditioning relay
- 148 Windshield wiper interval relay
- 163 Tailgate wiper interval relay
- 167 Relay, delayed cabin light
- 175 Timed relay, heated rear window (USA)
- 188 Central lock system relay (unlocking)
- 189 Central lock system relay (locking)
- 199 Cruise control ECU
- 216 Main fuel pump relay (non-turbo)
- 217 Fuel injection relay LH (non-turbo)

