
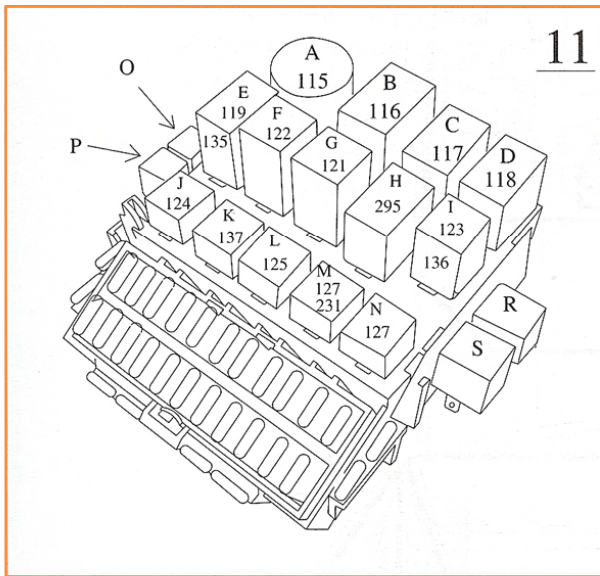
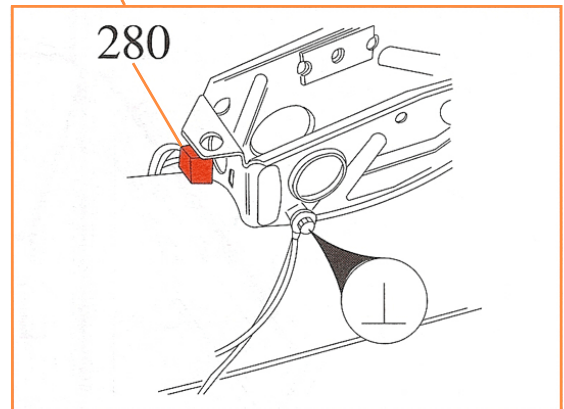
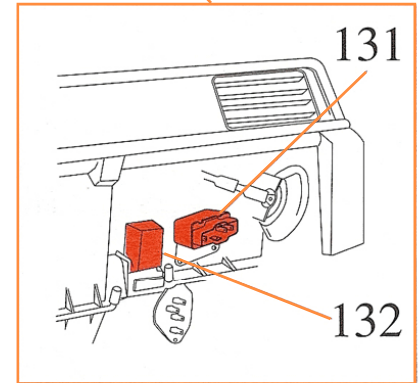


Relay Locations, 1987 740/760

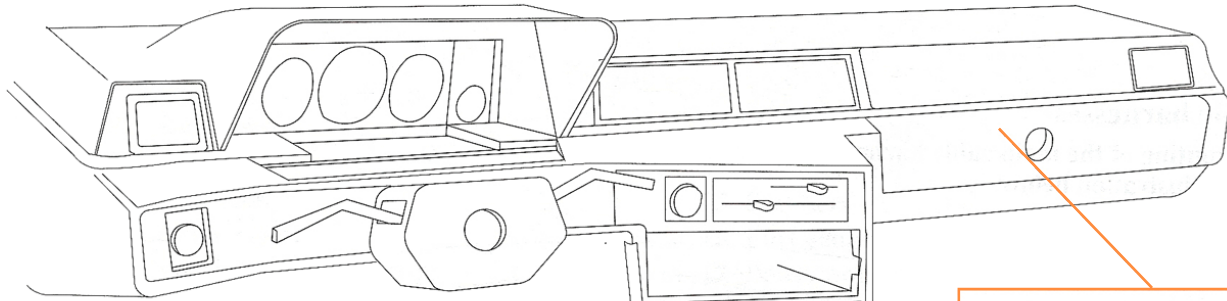


Central Fuse/Relay Panel

- A (115) Bulb failure warning relay
- B (116) Seat belt reminder relay
- C (117) Windshield wiper intermittent relay
- D (118) Tailgate wiper intermittent relay
- E (119/135) Fuel pump, F.I. system relay
- F (122) EGT sensor relay (Japan)
- G (121) Flasher relay
- H (295) Gear shift indicator relay
- I (123/136) Transmission overdrive relay
- J (124) Power window/elec cooling fan relay
- K (137) Headlight relay
- L (125) Central lock relay
- M (127/231) Auxiliary light/rear fog light relay
- N (127) Auxiliary light relay
- O (unspecified)
- P (unspecified)
- R (unspecified)
- S (unspecified)

Relays

- 131 AC fan relay
- 132 AC compressor delay relay
- 280 Heated seats relay

Relay Locations, 1987 740/760

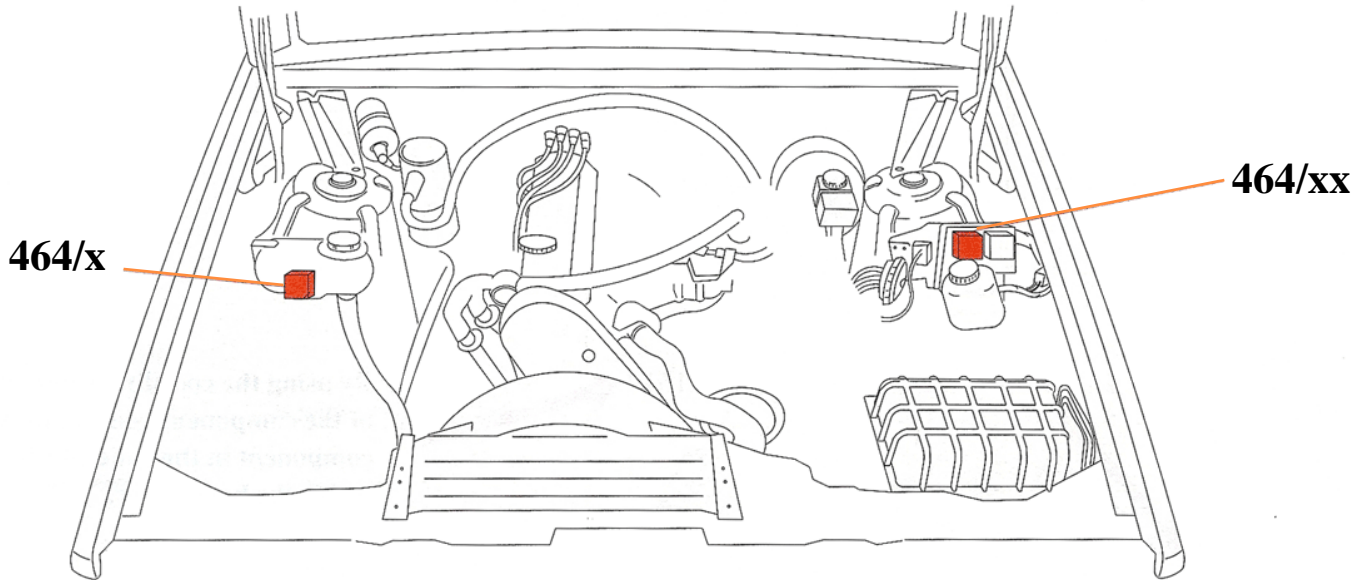

Under Hood Relays

- 464/x Noise suppression/RFI relay (fuel injection), B230F, B280F
- 464/xx Noise suppression/RFI relay (fuel injection), B230FT